

LiveNoise LN2-IND with Industrial Noise Sign

Features

- Wall Mounted Industrial Noise Display
- Monitors Sound Levels
- Network Connection (WiFi or wired Ethernet)
- Lights up when noise levels are too high
- IEC 61672 Class 2, ANSI S1.4 Type 2
- **No contract or annual fees**

Applications


- Industrial Environments
- Factory Noise
- Hearing Protection

Overview

The industrial noise warning sign and interface module can be mounted on a wall or other suitable surface. An optional adjustable VESA mount can be used for more secure or corner mounting if needed. It measures the sound levels in line with the noise measurement standards, stores the results, and sends them to our cloud server.

Live Noise and Reporting

You can view the live sound level at each noise monitor or you can view long-term reports over daily, weekly, monthly or custom periods. This is all done from your web browser after logging in to your LiveNoise account.

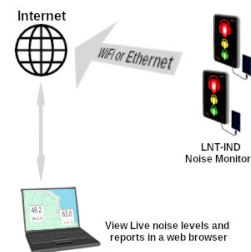

LiveNoise LN2-IND with Industrial Noise Sign

Specifications

Technical Specifications

Acoustic Standards IEC 61672-2:2002 Class 2

Frequency Range ANSI S1.4 Type 2

Measuring Range 20 Hz to 20 kHz

Range 30 to 120 dB

Deviation ± 0.5 dB

Frequency Weighting "A" and "C"

Noise Measurements Leq, Fast and Slow sound Level

Additional Outputs 0-10 V or 4-20 mA

USB Port For USB memory stick configuration

Ethernet Port RJ45 socket

Internal Memory 16 GB for up to 3 years storage

Dimensions Noise Warning Sign 265 x 205 x 46 mm, 10.4" x 8" x 1.8"

LiveNoise Terminal Power 70 x 88 x 29 mm, 2.8" x 3.5" x 1.2"
5 VDC, max 12W (power adapter included)

Dimensions

Head Office

NoiseMeters Ltd
7 Jayes Park
Ockley
Surrey
RH5 5RR

Telephone **0845 680 0312**
Fax **0845 680 0316**

Email: info@noisemeters.co.uk
Support: support@noisemeters.co.uk

Web Sites

Main site:
<https://www.noisemeters.co.uk>

Product shortcut:
<https://www.noisemeters.co.uk/product/livenoise/lnt-ind/>

Tech Support:
<https://support.noisemeters.com>